

## Terminal Configuration

Terminal shapes vary from one battery to another. By identifying the correct replacement battery from the specification listing, you are assured of the proper terminal configuration. For custom applications, refer to the chart below.

Type	Terminal			Battery Type											
	Front	Side	Top												
1				VTX16-BS-1, CB7C-A, CB14L-A1											
2				CB9L-A2, CB16AL-A2											
3				CB7L-B, C60-N24L-A, C60-N24AL-B, 12N24-3											
4				VTX14AH-BS-FS, VTX14AHL-BS-FS, VTX14-BS-FS, VTX15L-BS-FS, VTZ16H, VTX20CH-BS-FS, VTX20-BS-FS, VTX20L-BS-FS, VTX24HL-BS-FS, VTX14AH-BS, VTX14AHL-BS, VTX14-BS, VTX14L-BS, VTX15L-BS, VTX16-BS, VTX20CH-BS, VTX20-BS, VTX20L-BS, VTX24H-BS, VTX24HL-BS, CB12C-A, CB16B-A, C50-N18L-A3, CB30L-B, CB30CL-B											
5				VTX4L-BS-FS, VTX5L-BS-FS, VTZ5S, VTX6.5L-BS-FS, PTX7A-BS-FS, VTX7L-BS-FS, VTZ7S, VTZ8V, VTX9-BS-FS, VTX12-BS-FS, VTX19CL-BS-FS, VTX30L-BS-FS, VTX30CL-BS-FS, VTX4L-BS, VTX5L-BS, VTX6.5L-BS, VTX7A-BS, VTX7L-BS, VTX9-BS, VTX12-BS, VTX19CL-BS, VTX30L-BS, VTX30CL-BS, CB4L-A, CB4L-B, CB16CL-B											
6				VTX9-B-FS, VTX12A-A-FS, VTX9-B-BS, VTX19-BS, VTX19L-BS, CB16-B-LM, CB16HL-A-LM, CB3L-A, CB3L-B, CB5L-B, CB7-A, CB7B-B, CB9-B, CB9A-A, CB9L-B, CB10L-B, CB12A-A, CB12AL-A, CB12A-B, CB14A-A1, CB16-B, CB16L-B, 6N6-3B, 6N6-3B-1, 6CB8L-B, 6N11-2D, 6N11A-1B, 6N12A-2D, B38-6A, B39-6, B49-6, B54-6, 12N5-3B, 12N5-4B, 12N5.5-3B, 12N5.5-4A, 12N5.5A-3B, 12N7-4A, 12N7-3B, 12N7D-3B, 12N7-4B, 12N9-3A-1, 12N9-3B, 12N9-4B-1, 12N10-3A, 12N10-3A-1, 12N12A-4A-1											
7				C50-N18L-A-LM, CB16B-A1, HCB16A-AB, CB18-A, CB18L-A, C50-N18A-A, SC50-N18L-AT											
8				CB10A-A2, CB10L-A2, CB10L-B2, CB12AL-A2, CB12B-B2, CB14A-2, CB14A-A2, CB14B-2, CB14L-A2, CB14L-B2, SCB14L-A2, SCB14L-B2, 12N11-3A-1, 12N14-3A											
9				CHD4-12											
10				VTX51913--FS, 51814, 51913, 53030											
11				VT7B-4, VT9B-4, VTZ10S, VT12B-4, VTZ12S, VT14B-4, VTZ14S, VTX12ABS-FS, VTR9-BS, VTX12A-BS											
12				VTR4A-BS											
13				VTX4B-BS-FS, VTX4B-BS											
14				VTX11U1-LD-FS, U1(9)											
15				VT19-BS-FS, VT19L-BS-FS, VTX20H-BS-FS, VT20HL-BS-FS, VT30HL-BS-FS, VT32HL-BS-FS											
16				VT14L-BS-FS											
17				VTX26RH-FS											
18		<table border="1"> <thead> <tr> <th rowspan="2">TERMINALS</th> <th colspan="2">D (MM)</th> </tr> <tr> <th>+</th> <th>-</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>14.7<sup>0</sup><sub>-0.3</sub></td> <td>13.0<sup>0</sup><sub>-0.3</sub></td> </tr> <tr> <td>2</td> <td>19.5<sup>0</sup><sub>-0.3</sub></td> <td>17.9<sup>0</sup><sub>-0.3</sub></td> </tr> </tbody> </table>	TERMINALS	D (MM)		+	-	1	14.7 <sup>0</sup> <sub>-0.3</sub>	13.0 <sup>0</sup> <sub>-0.3</sub>	2	19.5 <sup>0</sup> <sub>-0.3</sub>	17.9 <sup>0</sup> <sub>-0.3</sub>		NS40Z, NS40ZL, NS40Z(S), NS60, NS60L, NS60(S), NS60L(S), N100, N100L, N120, N120L, N200, N200L
TERMINALS	D (MM)														
	+	-													
1	14.7 <sup>0</sup> <sub>-0.3</sub>	13.0 <sup>0</sup> <sub>-0.3</sub>													
2	19.5 <sup>0</sup> <sub>-0.3</sub>	17.9 <sup>0</sup> <sub>-0.3</sub>													